


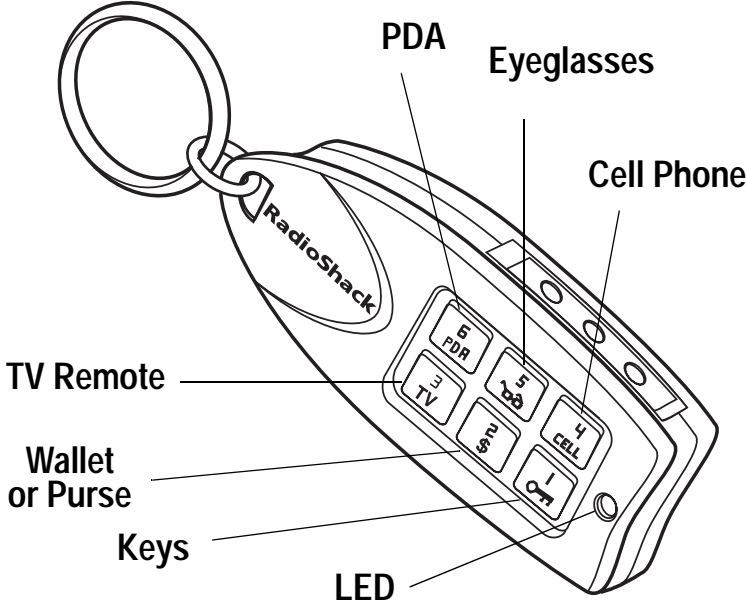

# Find One, Find All Keyfinder

63-1155

Your Find One, Find All Keyfinder comes in a set of two and helps you find up to six items within a range of up to 30 feet. Just attach the keyfinder to objects that are easily lost, such as keys, TV remote controls, or cell phones. Buttons on each key correspond to everyday household items.



## Checking Your Set-Up

You can check the set numbers and item numbers on each keyfinder at any time. Press and hold 5 and 6 at the same time. The LED flashes and two continuous beeps sound with a pause between each one. The first one is the set number and identifies which keyfinder set you have. The last one is the item number programmed for that keyfinder.

**For example:** If the keyfinder gives two beeps with an interval and then one beep, that indicates the keyfinder belongs to Set 2 and Item 1.


## Hints & Tips

- For the best results, hold the keyfinder unit with the LED pointing away from you.
- Walk around your house while you repeatedly press the number associated with the item you are searching for in order to get a clear search signal.
- Keep the keyfinder away from large metal objects and other radio sources that might reduce its range.
- To avoid confusion, use only one keyfinder to search for the object you desire.
- Reduce or eliminate noises so you can identify the beeping sound from the object you are looking for.

## Installing the Battery

The keyfinder comes with one CR 2032 battery (uninstalled). Insert the battery as follows.

- Pull out the battery tray.
- Place the new battery on the tray, with the positive (+) side up.
- Push the battery tray back in.

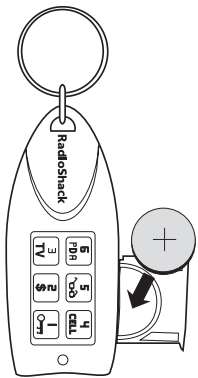

The keyfinder beeps and goes directly into setup mode. The LED flashes for about 50 seconds until you press a button. Follow the steps in **Programming the Keyfinder** to program your settings.

## Programming the Keyfinder

You can compose six sets of keyfinder systems. In each system, you can program up to six items. Each item must have a separate keyfinder attached to it.

- Press a button on the keyfinder to program the set number. The keyfinder beeps and the LED flashes quickly.
- Press a button to program the item number. The LED flashes and the keyfinder beeps to confirm your settings. For example, if you programmed your keyfinder as Set 1 and Item 2, the keyfinder will beep once, pause, and then beep twice.

### Notes:

- When you remove or replace the battery, your keyfinders will lose their settings. In this case, you must program the keyfinder again.
- If you do not program the keyfinders and press any key on the unit, all unprogrammed units may respond. If keyfinder units are placed too close together and you press a key on the keyfinder unit, you may receive a false beep from the other keyfinder.
- Do not attach the keyfinder to large objects.

## Changing Your Keyfinder

- Press and hold 1 and 3 on the keyfinder for about three seconds to enter the setup mode. The keyfinder gives a warble beep and the LED flashes continuously.
- Repeat Steps 1 and 2 under **Programming the Keyfinder**.

## Care & Maintenance

- Keep the keyfinder dry; if it gets wet, wipe it dry immediately.
- Use and store the keyfinder only in room temperature environments.
- Handle the keyfinder carefully. Do not drop it.
- Keep the keyfinder away from dust and dirt.
- Wipe the keyfinder with a damp cloth occasionally to keep it looking new.

## Specifications

Power .....	One CR 2032 Battery
Transmission Frequency .....	433 MHz
Transmission Range .....	30 Feet
Battery Life .....	About 1 year
Unit Size .....	70.9 X 30.5 X 13mm

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

## Attaching the Keyfinder

Each keyfinder comes in a set. Use the plastic cord or the supplied double-sided tape to attach one keyfinder to an object you don't want to misplace. Keep the other keyfinder to use when searching for lost objects.

Loop the plastic cord through the opening at the top of your cell phone and then slide the plastic cord onto the keyring of the keyfinder.



## Finding Lost Objects

To find a lost object, press the button on the keyfinder that corresponds to the lost object. The LED flashes as the search signal is transmitted.

If the object is within range, the keyfinder beeps and the LED flashes. Move around the area and follow the sound until you find the lost object. The keyfinder attached to the object you are searching for emits a cluster of beeps, while the LED flashes continuously.

**Note:** You can use any keyfinder within the same set to search for lost objects. This includes keyfinders that are already attached to an item, such as your car keys or cell phone. If you lose your keyfinders, you can borrow someone else's keyfinder. Program the keyfinder to your set to locate your lost keyfinders.

## Battery Cautions:

- Use only fresh batteries of the required size and recommended type.
- If you do not use the keyfinder for a month or more, remove the battery.
- Dispose of the old battery promptly and properly. Do not burn or bury it.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

## The FCC Wants You to Know

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for [one (1) year] from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102